



PROTECTIVE SHIELDS


INSTALLATION INSTRUCTIONS - WET APPLICATION



Surface Preparation:

1. Clean and remove all dust and dirt from surface with SKINZZ Application Solution, and a clean, low-lint cloth. Use OTIS Multi-Surface cleaner to remove heavy grease or grime. Make sure to clean debris from the edges of the application area.

Note: Dust and dirt on surface may cause bubbles or adhesion problems.

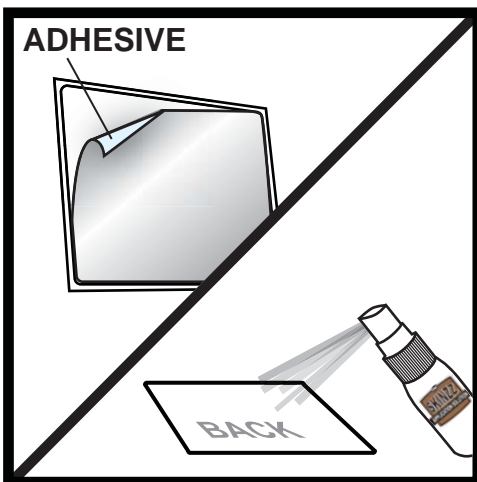

Application:


1. Peel away the lining to expose the adhesive backing. Avoid touching SKINZZ adhesive side.

2. Spray the SKINZZ application solution on the adhesive side, and apply SKINZZ to the equipment.

3. Center SKINZZ Protective Shield on the equipment, and use the squeegee to remove excess solution and air bubbles from under the SKINZZ Protective Shield. Use a cloth to soak up excess solution around shield edges.

Note: Wet instructions are not for keypad applications.

MSDS available at www.mycaf.com

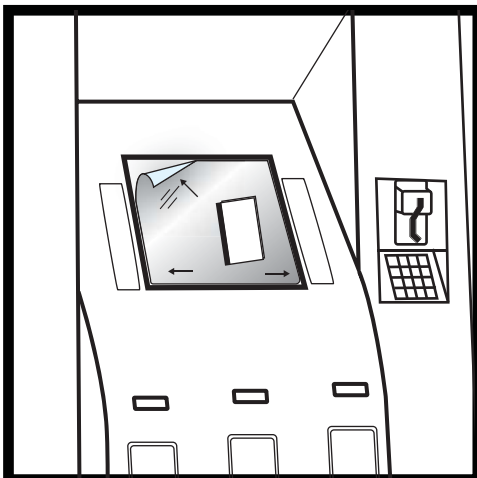

Scan for videos, MSDS, training and more.



www.mycaf.com/SKINZZ.php



For questions or product information, please contact CAF (425) 433-8277 or visit www.mycaf.com