



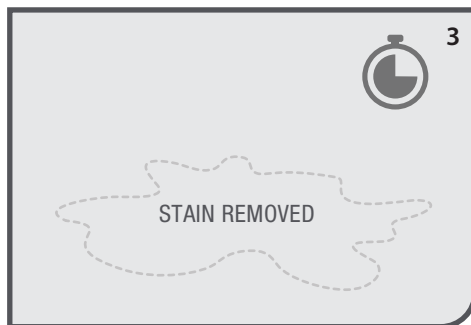

# WATERLESS CONCRETE CLEANER CLEANING INSTRUCTIONS

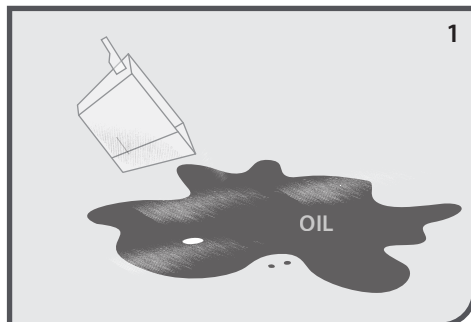

## PREPARATION

Ensure area is dry and free of trash or debris.

## TO CLEAN

1. Using provided scoop, apply EXIMO directly to oil spot. 1/4 cup will cover up to 55 sq. ft., the average size of one (1) fuel lane or one (1) parking space.
2. Keeping broom in contact with surface, sweep product forward and backward across the oil spot. Next, sweep across the initial line until product is fully dispersed

Applying the correct amount of product should leave no excess - if excess remains, continue sweeping until product is fully dispersed.

3. Oil stains are removed within 4-6 weeks. Re-apply weekly to prevent future staining.

## EFFECTIVE ON

- Concrete
- Parking lots
- Driveways
- Drive thrus
- Forecourts
- Sidewalks
- Pavers

## FREQUENCY

As needed. Apply 1-2 times per week. For tougher stains pretreat first with OTIS concentrate.

## TASK DURATION

2-3 minutes per task when used weekly.

## TIPS

- Use an application schedule
- Don't try to do all at once



Note: EXIMO breaks down hydrocarbon chains within the petroleum stains on the surface, and deep inside the pours of the concrete, restoring the surface to its original appearance.



**HAVE QUESTIONS? NEED TRAINING?  
WE'RE HERE TO HELP!**



Visit [www.mycaf.com](http://www.mycaf.com) for additional product information, SDS, training materials, product videos and more.

