

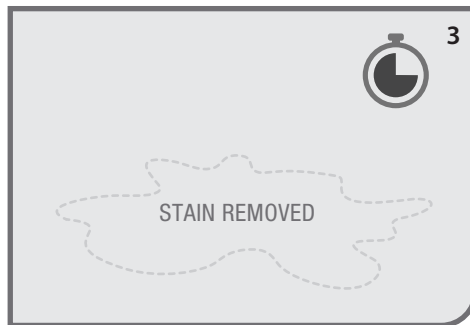


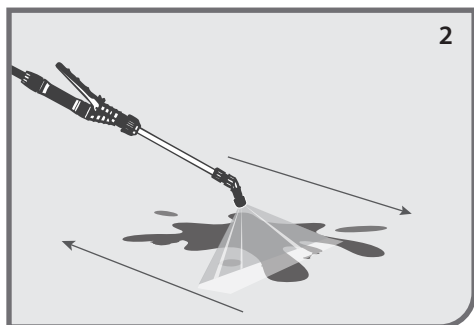

CONCRETE CLEANER CLEANING INSTRUCTIONS

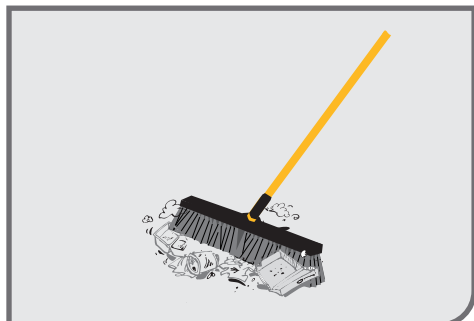

EFFECTIVE ON

- Concrete
- Parking lots
- Driveways
- Drive thrus
- Forecourts
- Sidewalks
- Pavers

FREQUENCY

As needed. Apply 1-2 times per week. For tougher stains pretreat first with OTIS concentrate.

TASK DURATION

2-3 minutes per task when used weekly.

PREPARATION

Ensure area is dry and free of trash or debris.

TO CLEAN

1. First add water to a 2 gallon sprayer container. Using Scoop provided add 1 cup of EXIMO to 1 gallon of water and mix thoroughly. Afterward, attach pump handle and begin to pressurize the sprayer tank.
2. Keeping sprayer 12-18 inches from the ground, begin walking back and forth applying a smooth even motion. This process will create wide, long strips of EXIMO during application.

Be careful not to puddle or apply too much EXIMO while spraying. Keep with a back and forth motion, using even strides.

3. Oil stains are removed within 4-6 weeks. Re-apply weekly to prevent future staining.



TIPS

- Use an application schedule
- Don't try to do all at once

Note: EXIMO breaks down hydrocarbon chains within the petroleum stains on the surface, and deep inside the pores of the concrete, restoring the surface to its original appearance.



**HAVE QUESTIONS? NEED TRAINING?
WE'RE HERE TO HELP!**



Visit www.mycaf.com for additional product information, SDS, training materials, product videos and more.

